



Модель принтер (МФУ, факса)	Модель картриджа
Apple Color LaserWriter 12/600	136121x
Apple LaserWriter 16/600 PS	92298A
Apple LaserWriter II SC/NT/NTX/F/G	92295A
Apple LaserWriter Pro 600/630/680	92298A
Apple LaserWriter Select 350	C3900A
Apple Personal LaserWriter 300/320	92274A
Apple Personal LaserWriter LS/NT/NTR/SC	92275A
Apple Personal LaserWriter Plus	92295A
Brother Fax 400/2x00/3500/4x00/5xxx/MFC6000, PPF2300/2400	TN-100
Brother HL-600/630/631/641/645/655/660	
Brother Fax 3550/3650/4550/6550/7550/8xxx/MFC9xxx	TN-200
Brother HL-700/720/730Plus/760	
Brother Fax 8000P/8200P/8250P/8650P, 2750/3550/3650/3750	(drum)
Brother HL-720 /730/730+/730DX/760/760+/760DX	DR-200
Brother HL-820/1040/1050/1060/1070	TN-300
Brother HL-1000, MFC-2000	TN-300HL
Brother HL-5130/5140/5150/5170	TN-3030 (3.5k)
	TN-3060 (6.7k)
Brother HL-5240/5250/5270	TN-3170
Brother HL-6050	TN-4100
Brother HL-7050	TN-5500
Brother DCP8020 / MFC8420	TN-7300
Brother Fax 8070P/2850, MFC4800/9030/9070/9160/9180	TN-8000
Brother HL-1260/1660	92298A
Brother HL-4/6 PS/V/VE/P110/LBP-LX	92275A
Brother HL-8/10 DPS/DV/H/PS/V	92295A
Brother HL-PSJ/8 PSJ	C3900A
Canon LBP-1260/1260C/8 IV/EX, P270	92298A
Canon LBP-800/810/1120	EP-22
Canon LBP-1210	EP-25
Canon LBP-1760	C4127A
Canon LBP-2460	C3909A
Canon LBP-2900/3000	Canon 703
Canon LBP-3010/3100	Canon 712
Canon LBP-3300	Canon 708
Canon LBP-3200/MF5630/MF5650/MF3110/MF5730/MF5750/MF5770	EP-27
Canon LBP-3250	Canon 713
Canon LBP-4/4Plus/4lite/4LX/SX, P110	92275A
Canon LBP-430/430w/4u/4i, P90/PX/PXII	92274A
Canon LBP-460/465/660/665	C3906A
Canon LBP-8/8II/8III (R/T)	92295A
Canon LBP-8A1/8A2/8DA1/8I/CX	92285A



Canon LBP-A/BX	C3900A
Canon LBP-NX/NX 600, P170	92291A
Canon LBP-SX/RX/TX/200v	92295A
Canon MF4410/ MF4430/ MF4450/ MF4550D/ MF4570DN/ MF4580DN	Canon 728
Canon Fax L 250/300	FX-3
Canon Fax L 3000/3300/7xx	FX-1
Canon Fax L 3100/4600/920	92295A
Canon Fax L 500/550/600	FX-2
Canon Fax L 800/900	FX-4
Canon MultiPASS L 60/90	FX-3
Canon MultiSpot	FX-4
Citizen Pro Laser 6000	S051011
DEC Declaser 1000/1100/1150/1152	92275A
DEC Declaser 2100/2150/2200/2250	92295A
DEC Declaser 5100	92298A
DEC LN05/LN06/LN06P	92295A
DEC Printserver 17	92291A
Epson ActionLaser 1000/1500	S051011
Epson ActionLaser 1600	S051016
Epson ActionLaser II	S050002
Epson EPL 3000	S051020
Epson EPL 4000/4100/4300	S050002
Epson EPL 5000/5200/5200+	S051011
Epson EPL 5500/5500+	S050005
Epson EPL 5600	S051016
Epson EPL 5700	S050010, S051055
Epson EPL 5900/6100	S050087
Epson EPL 6200	S050166
Epson EPL 6200L	S050167
Epson EPL 7100/7500/8100	S051009
Epson EPL 9000	S051022
Epson EPL C8000	S051016/7/8/9
Epson EPL N1200	S051016
Epson EPL N1600	S051056
Epson EPL N2000	S051035
Epson GQ 3500/5000	#5760, #5793
Fujitsu FaxJet	S051009
Fujitsu VM 600	S051011
Genicom 6000/6140/6142/6145/7610/7612	92295A
Genicom 9080	C3900A
Genicom 9170	92291A
Hewlett-Packard Color LaserJet/5/5M	C3102/3/4/5A
Hewlett-Packard LaserJet/Plus/500Plus	92285A



Hewlett-Packard LaserJet 4/4M/4+/4M+/5/5N/5M	92298A(X)
Hewlett-Packard LaserJet 4V/4MV	C3900A
Hewlett-Packard LaserJet 4L/4ML/4P/4MP	92274A
HP LaserJet 5Si/5Si MX/5Si NX/5Si Mopier/8000/Mopier 240	C3909A
HP LaserJet 5L/6L/3100	C3906A
HP LaserJet 5P/5MP/6P/6MP	C3903A
HP LaserJet 1100/1100A/3200/3220A	C4092A
HP LaserJet 1000/1005/1200/3300/3330	C7115A/X
HP LaserJet 1010/1015/1020/1022/3015/3030	Q2612A
HP LaserJet 1150	Q2624A
HP LJ 1160/1320	Q5949A/X
HP LJ P1005, P1006	CB435A
HP LJ P1505, M1120mfp, M1522mfp	CB436A
HP LJ P1566/P, 1560/P, 1606dn/M, 1536dnf	CE278
HP LJ P4014, P4015, P4515	CC364A/X
HP LJ 1300	Q2613A/X
HP LJ 2100/2200	C4096A
HP LJ 2300	Q2610A
HP LJ 2410/2420/2430	Q6511A/X
HP LJ 4000/T/N/TN, 4050/T/N/TN	C4127A/X
HP LJ 4200	Q1338A
HP LJ 4300	Q1339A
HP LJ 4250/4350	Q5942A/X
HP LJ 5000/N/GN	C4129X
HP LJ 8100/Mopier 320	C4182X
HP LJ II/IID/IIID	92295A
HP LJ IIISi/4Si/4Si MX	92291A
IBM 3112/3116/3912/3916	1382100
IBM 3112/3116/3912/3916	1382100
IBM 4019/4028/4029/4030	1380520
IBM 4039	1382100
Lexmark Optra +/R/R+/Rn/Rt/Lx+/Lxi+/Lxn+	1382150
Lexmark Optra C	136121x
Lexmark Optra E/Ep/E+	69G8256
Lexmark Optra N/N Pro	1382140
Lexmark Optra S	1382925
Lexmark Optra SC	136175x
Lexmark WinWriter 600	1380520
Minolta Fax 1000/3300/3800	S051009
Minolta Fax 1900	S051020
Minolta Fax 2300/5200	S051011
Minolta SP 10/101/3000/3500	S051009
Minolta SP 1000/1500/1700/6/X	S051011



Mita Fax TC 650/670/675	TN-100
Nec Silentwriter 260/290/990	92295A
Olivetti LP2000/5000	92295A
Olivetti PG 108/208/303/308/810/820/840	92295A
Panasonic KX-F1010/1015/1110/1116/1810/1830	KX-FA136
Panasonic KX-F1600/UF-342	BC-20
Panasonic KX-F2900/3000/3100/511	KXP-455
Panasonic KX-F929/1000/1006/1020/1050/1100/1150/1200	KX-FA134
Panasonic KX-P4400/4401/4403/5400, SP100/500/505	KXP-455
Panasonic KX-P4410/4430/4440/5410	KXP-453
Panasonic KX-P4420	KXP-451
Panasonic KX-P6100/6150	KXP-457
Panasonic KX-P6300/6500, S600	KXP-459
Panasonic UF-550/560/770/880	UG-3313
Panasonic UF-744/745/788	UG-3309
Panasonic UF-750	KXP-457
Panasonic UF-755/758	UG-3204
Panasonic UF-766	KXP-453
QMS Kiss Plus 10/20/30	92295A
QMS PS1060	S051016
QMS PS1700/1725	92291A
QMS PS2425/2425EX	C3909A
QMS PS3200/3225/810/815/820/2308/3308	92295A
QMS PS400/410/420/460J	92275A
QMS PS660	S050002
QMS PS860/869/1660	C3900A
Ricoh Fax 1000/1001/1010/4000L/7000	92295A
Ricoh Fax 2700L/3700L/4700L/2800DI/L	92295A
Ricoh Fax 2500L/3000L/3100L/3200L/3500L/4500L	92295A
Siemens 670	UG-3204
Siemens 9021	92275A
Siemens Highprint 4810/7800	92295A
Siemens Highprint 7500	92275A
Star Laser Printer 4/4II/4III	92275A
Star Laser Printer 8II/8III	92295A
Xerox 3010/4505/4510/5505	113R00005
Xerox 4508	113R00265
Xerox 4512	06R00090
Xerox 4517	113R00095
Xerox 4520	06R00053
Xerox C55	06R00856
Xerox N24/32/40	113R00296
Xerox P8e	113R00184



Xerox WC PE16/PE16e	113R00667
Xerox WC M15/M15i	106R00586
Xerox WC PE114	013R00607
Phaser 3110/3210	109R00639
Phaser 3120/3121/3130	109R00725
Phaser 3310	106R00646